

AIRMAR P66


Housing Style Differences

The Airmar P66 transducer housing is available in two different styles, called Style "A" and Style "B." Although the electrical and acoustical characteristics of these transducers are identical, the housing is not the same and care must be taken when replacing the bracket for the P66 transducer.

The purpose of this document is to describe the differences between the two housing styles, and also to list the correct Furuno part numbers for the bracket should it require replacement.


P66 Housing Style "A"

Housing has complete hole through which cable passes where it exits the transducer.

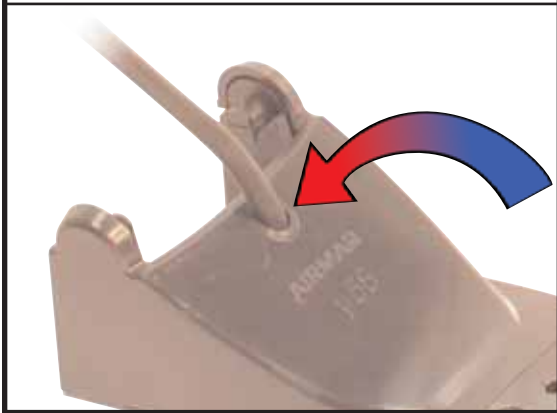

P66 Housing Style "B"

Housing has cutout where cable exits the transducer instead of a hole in the housing.

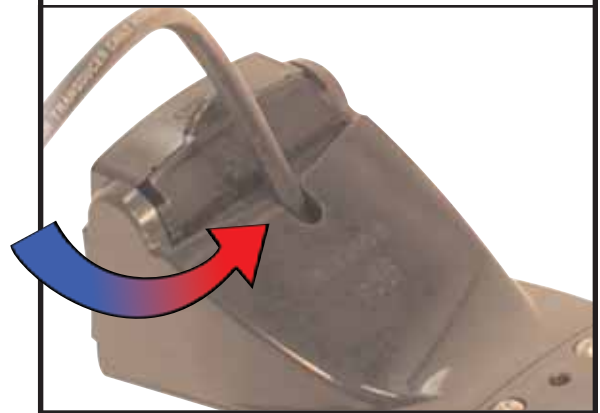

Mounting Bracket P# AIR-020-275

This bracket has no raised lip where the transducer connects, and should only be used for Style "A" P66 Housings.



Mounting Bracket P# AIR-033-479

This bracket has a raised lip where the transducer connects, and should only be used for Style "B" P66 Housings.

